Electrolux

Better living means combining thoughtful compact design with technology that uses less heat to be gentler on your clothes.

A Quick Guide to Getting Started




Before you begin

- Check that all shipping materials are removed and ensure the dryer is level, side-to-side and front-to-back; sitting evenly on all corners.
- Refer to your Installation Instructions for more tips.

Care and cleaning

- Do the following after every load to ensure the best function of your dryer:
  - » Clean the lint filter.
  - » Empty the water container.
    - *If the direct drain kit is installed, the water container does not need to be emptied. See the Use & Care Manual for more information.*

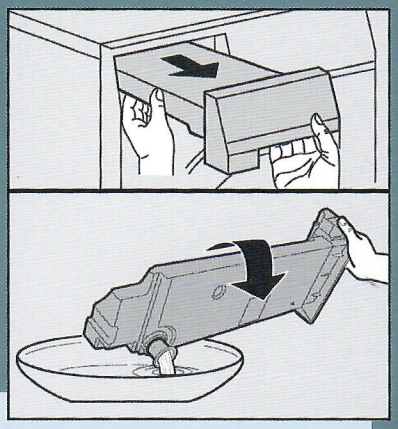


We Recommend:
Always make sure the water container is in place and empty before starting a load.

- Occasionally clean the condenser. Follow the instructions in the Use & Care Manual for more details.

FAQs

- **How is a condensation dryer different than a traditional dryer?**
  Condensation dryers are more energy efficient than traditional vented dryers as they recirculate the air preventing heat loss. This process usually causes them to take longer to dry clothes.
- **How do I change a setting after a cycle has begun?**
  Turn the knob to the reset position (12 o'clock) OR press the power button to turn off the dryer and cancel the cycle. Press the power button to turn the dryer on again, select the new setting, then press start/pause to start the cycle. Changing a cycle selection without canceling the current cycle will not change the cycle selection.
- **Is it normal for my dryer to make sounds or noises?**
  Some sounds are part of your dryer's normal operations. You may hear the suspension rollers or air exchange system moving air through the cycle. You may also hear the pump which extracts the condensed water from the unit. Check your Use & Care Manual to learn more.

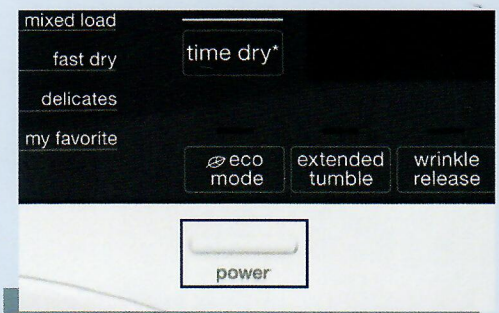

The power button also cancels a selected cycle.

For more information and FAQs, visit electroluxappliances.com

136962570
(August 2020)

Getting Started



Turn on your dryer

Press the power button ⏻ to turn on your unit.

Select a cycle

TIME DRY
Select this cycle to manually set the drying time. Use the time dry option button to scroll through the time increments.

NORMAL
Select this cycle for cotton items.

HEAVY DUTY
Select this cycle to dry durable fabrics such as sheets or other bedding.

DELICATES
Select this cycle for delicate knit items.

CASUAL
Select this cycle for cottons and no-iron blends.

MIXED LOAD
Select this cycle to dry mixed fabric loads.

INSTANT REFRESH
Select this cycle to help release wrinkles from clean and dry items.

TOWELS
Select this cycle to dry heavy loads such as towels and non rubber backed bath mats.

JEANS
Select this cycle when drying denim loads.

FAST DRY
Select to quickly dry small loads.

ACTIVEWEAR
Select to dry lightweight synthetic and stretch fabrics.

MY FAVORITE
Customize any existing dry program and save it as a unique cycle for future use. See your Use & Care Manual for easy instructions.

Select cycle options

WRINKLE RELEASE
This option provides an additional 30 minutes of intermittent tumbling where the drum alternates tumble direction to reduce wrinkling in clothing items.

ECO MODE
This option runs the dry cycle with reduced temperature. Selecting Eco Mode generally increases drying cycle times.

EXTENDED TUMBLE
This option provides an additional 30 minutes of tumbling time without heat.

Start load

Close the door and press the start/pause button.

Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.

Sustainability, together

Designed with advanced drying technology to use lower heat to be gentler on your clothes and help save energy.



Peace of Mind & Protection
Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.


electroluxappliances.com
(877) 435-3287
10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca
(800) 265-8352
5855 Terry Fox Way
Mississauga, ON L5V 3E4

Electrolux

Better living means combining thoughtful compact design and performance for an effective clean.

A Quick Guide to Getting Started

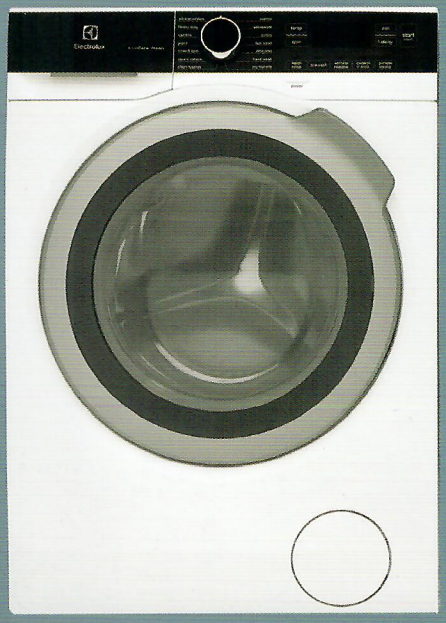

Before you begin


- Make sure all shipping materials including shipping bolts are removed. Ensure your washer is level with all four corners firmly resting on the floor.
- Use new hoses and check HOT and COLD water supply connections are turned on.
- Following these tips will help prevent leaks and excessive vibration during wash cycles. Refer to the installation instructions included with the unit for more details.

Care and cleaning

Run the clean washer cycle once per month. Raise the detergent flap and fill with bleach or PureAdvantage™ Probiotic Washer Cleaner. See your Use & Care Manual for additional cleaning suggestions.




10ELPROL01

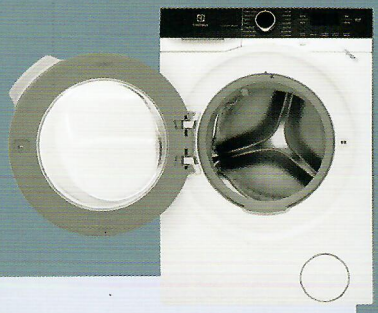

We Recommend:
When safely able to do so, leave the washer door open after use to prevent odors and mildew.

FAQs

- How do I use my detergent dispenser?
  We recommend using high-efficiency (HE) detergent for your front load washer. For liquid detergent ensure the dispenser flap is in the down position and up for powder detergent. PODS or detergent packs must be placed directly in the washer tub prior to loading laundry.
- How do I add an item if the wash cycle has already started?
  To add an item while ADD A GARMENT is lit in the display, press the start/pause button to pause the cycle and wait for the door to unlock..
- How do I change a setting after a cycle has begun?
  Turn the knob to the reset position (12 o'clock) OR press the power button to turn off the washer and cancel the cycle. Press the power button to turn the washer on again, select the new setting, then press start/pause to start the cycle. Changing a cycle selection without canceling the current cycle will not change the cycle selection.

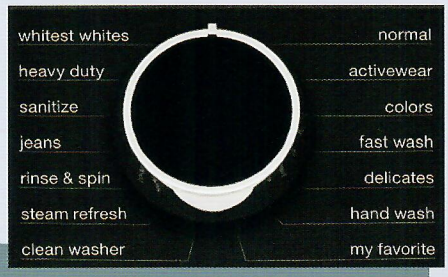

Turn the knob to the reset position to change cycle settings after the start button has been pressed.

157032450
(August 2020)

For more information and FAQs, visit electroluxappliances.com

Getting Started



Turn on your washer

Press the power button to turn on your unit.

Select a cycle

WHITEST WHITES
Select for white and lightly colored fabrics.

HEAVY DUTY
Select for heavily soiled, durable garments.

SANITIZE
Select to clean and sanitize heavily soiled, fabrics with colors that do not run or fade.

JEANS
Select to wash an entire load of light to normally soiled denim loads.

RINSE & SPIN
Select for loads needing a cold rinse or to add fabric softener missed in a regular cycle.

STEAM REFRESH
Select to refresh a small load of dry clothes with steam.

CLEAN WASHER
Select to clean and freshen the washer.

NORMAL
Select to wash cotton, linen, towels, sheets, denim and mixed loads.

ACTIVEWEAR
Select for lightweight synthetic apparel.

COLORS
Select for lightly soiled dark or dyed fabrics susceptible to dye loss.

FAST WASH
Washes a small, lightly soiled load in 22 minutes.

DELICATES
Select for lightly soiled knits and delicates.

HAND WASH
Select for fine garments with a "hand wash only" label.

MY FAVORITE
Customize any existing wash program and save it as a unique cycle for future use. See your Use & Care Manual for easy instructions.

Select cycle settngs

WASH WATER TEMPERATURE
Preset wash temperatures can be changed, however not all temperatures are available with every cycle. Cold water saves energy and reduces wrinkling.

SPIN SPEED
Spin speed can be changed depending on the type of clothing in the load. Higher spin speeds extract more water, and conserve energy.

SOIL LEVEL
Adjusts the wash time based on the soil level of the load.

Start load

Close the door and press the start/pause button.

Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.

Sustainability, together

Specifically designed for high-quality energy efficient performance without sacrificing clean.



Peace of Mind & Protection
Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

electroluxappliances.com
(877) 435-3287
10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca
(800) 265-8352
5855 Terry Fox Way
Mississauga, ON L5V 3E4